

# What's the Best Way to Reline and Protect Gutters?

## GUTTERGUARD™



### Save Money — Save Gutters, with GUTTERGUARD™!

**W**hen gutters leak, problems are just beginning. Deterioration rapidly grows, leaks increase, and replacement soon becomes inevitable. The alternative — reline with a seamless rubber system.


TOPPS® is the answer. Seal and reline all types of gutters with revolutionary GutterGuard™. This extremely tough, remarkable rubber liner goes on by spray or brush, making a perfect custom fit every time. Because it's made using 100% rubber, GutterGuard prevents further moisture attack, giving your gutter a durable seal.

GutterGuard's amazing ability to cling to edges works where you need it most — giving extra protection at seams and rivets. Water is blocked out. So is debris, build-up, and the common source for rust and corrosion to develop. Your system with GutterGuard™ flows better, too, with less cleaning.

GutterGuard™ — your most affordable gutter protection package to prevent early replacement. Your gutter system gets a complete, custom fit seamless rubber liner with a simple application.

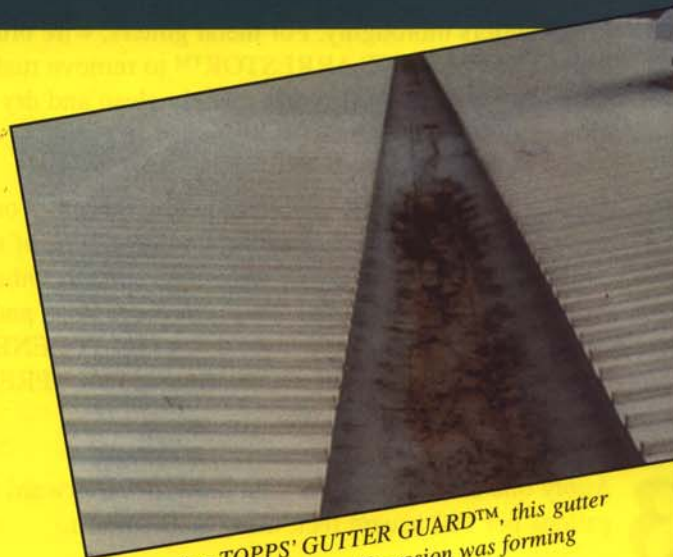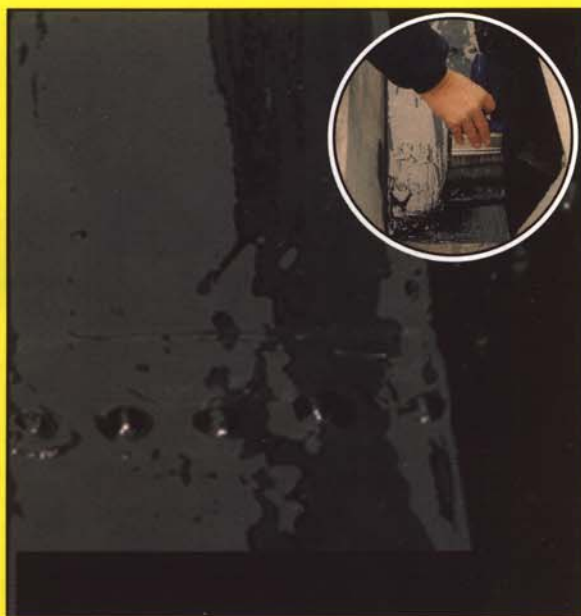

*Before using TOPPS' GUTTER GUARD™, this gutter was literally rusting away. Corrosion was forming faster each year.*

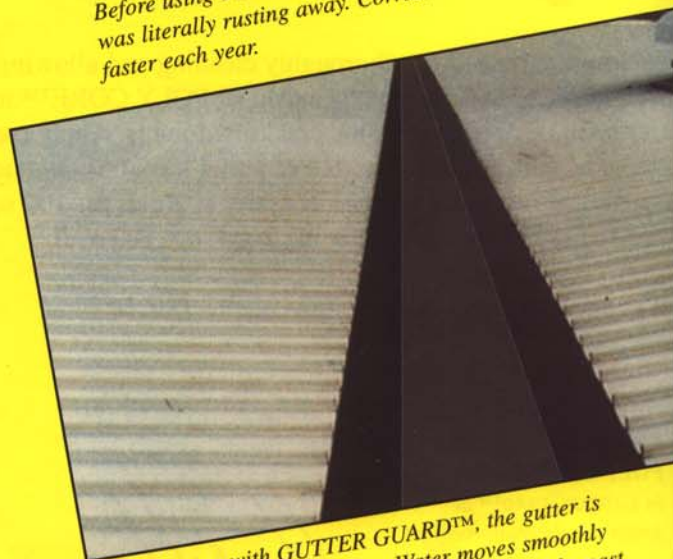

*After relining with GUTTER GUARD™, the gutter is restored to like-new condition. Water moves smoothly and rapidly through; deterioration is a thing of the past.*

- ◆ Leaves no seams!
- ◆ No temporary tapes — no dams!
- ◆ The durability of 100% rubber!
- ◆ Economical, easy application!

*Call today for more information on how GUTTER GUARD™ can solve your leaking gutter problems! You'll be glad you did!*



## It's Easy to Restore Gutters with

# GUTTERGUARD™

**1** Clean gutters thoroughly. For metal gutters, wire brush or apply TOPPS® RUST-ARRESTOR™ to remove rust, and rinse. The surface must be completely clean and dry before application of the GUTTERGUARD™ System.


**2** Tighten all fasteners. Replace any worn, missing, or stripped rivets or fasteners with round head type of slightly larger size. Perforated areas; replace as needed. Otherwise, using aluminum flashing material, fit a new piece flush and at least 3" beyond the repair area. Secure using POLYPRENE™ beneath the panel and any seam repairs. Spread POLYPRENE™ along all edges using rubber glove.

**3** Apply one even coat of GUTTERGUARD™ afterward at 2-1/2 gallons per 100 square feet, using a stiff brush.


**Concrete Gutters:** After thoroughly cleaning and allowing to dry, prime with CLEAR SEAL™. Embed 6" POLY CORE™ in GUTTERGUARD™ over hairline cracks and joints. Apply membrane to sides of gutter first, so bottom of gutter has one continuous strip over seams. Coat balance of gutter at 2 gal. per 100 sq ft. and allow to dry. Apply 2nd coat using 2 gal. per 100 sq ft.

All gutters must have proper slope and be free-flowing.


Concrete gutters require POLY CORE™ embedded in GUTTERGUARD™ at joints to add reinforcement.

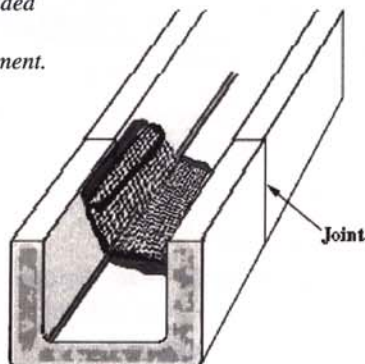


Wire brushing rust from metal valley gutter.

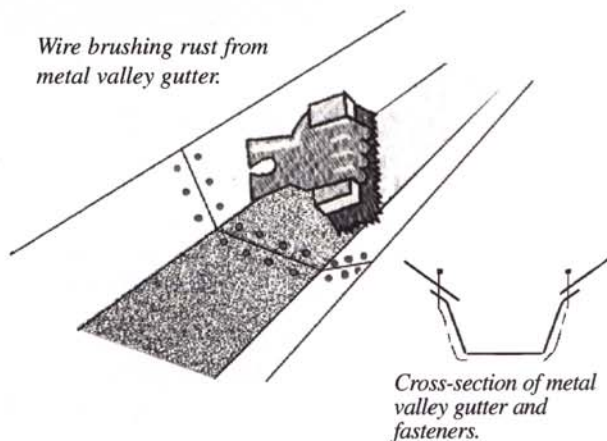

Apply thick GUTTERGUARD™ with roofing brush evenly to create a rubber liner.

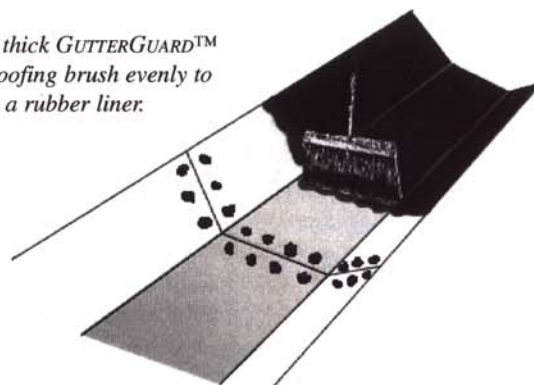

Metal gutters hanging from eaves need extra protection at seams and fasteners.

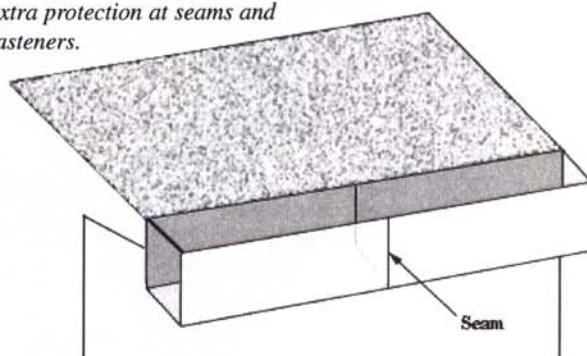

Independent Contractor: